

Budget Track Light

GLI-LTL-DA

INSTALL AND MAINTENANCE MANUAL

WARNING

1. Read all instructions.
2. Install in accordance with national and local electrical code regulations.
3. This product is intended to be installed and serviced by a qualified, licensed electrician.
4. Turn off electrical power before installing or servicing luminaire in any way.
5. To reduce the risk of fire and overheating, make sure all connections are tight.



**May result in serious injury or death.
Turn power OFF at circuit breaker
prior to installation or servicing.**

Budget Track Light

CAUTION

- Check input voltage before connecting the lamp to avoid damage.
- The installation and removal of lamps require professional technical personnel to operate.
- Check for signs of damage when opening the package. If broken glass is found, reach out for replacement.
- Professional technical personnel is required to operate, install or remove the fixtures.
- To avoid electric shock, turn off all lighting fixtures when connected to the power supply.
- Use a sturdy ladder and rubber-soled shoes for your protection.
- Only install on ceiling mount. DO NOT install on a vertically mounted track.
- Caution: small parts may be a hazard to children. Keep away from children.
- Only install in dry locations. Avoid damp or wet locations.
- Only install luminaire closer than 6 inches from curtains or other combustible materials.
- Caution: fire hazard or electric shock. Keep the away from combustible materials and vapors.
- Caution: electric shock. Ensure that power supply is off before handling. Only use the intended fixtures and fittings.
- Caution: burn hazard. Do not touch without letting light fixture cool.

INSTALLATION INSTRUCTIONS

PRE-INSTALLATION

Take the fixture and components out of the package. In case of missing parts, do not assemble, install, or operate this light fixture.

Before beginning installation, turn OFF power from the electrical panel.

Budget Track Light

INSTALLATION INSTRUCTIONS

TRACK INSTALLATION

STEP 1

See the Fig. 1 & 2

CONNECTOR GROUND CONTACT (A) and CONNECTOR NEUTRAL CONTACT (B) on LED fixture adapter and TRACK POLARITY LINE (E) on track.

STEP 2

See the Fig. 3 & 4

Secure the LED track fixture body. (Fig. 3).
Place the CONTACT HEAD into track. (Fig. 4)

STEP 3

Turn the adapter approximately 1/4 (90°) to lock track into opening.

Align CONNECTOR GROUND CONTACT (A) and CONNECTOR NEUTRAL CONTACT (B) with TRACK GROUND CONTACT (C) and TRACK NEUTRAL CONTACT (D) respectively.

Align the CONNECTOR GROUND and NEUTRAL CONTACTS with the TRACK POLARITY LINE (E). (Fig. 1 & 2)

NOTE: Do not force the mounting adapter in the wrong direction to avoid damage. In case the mounting adapter does not turn, turn adapter in the opposite direction.

Fig. 1

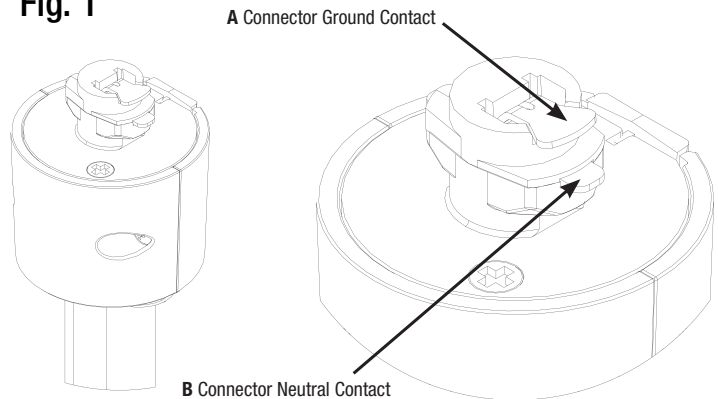


Fig. 2

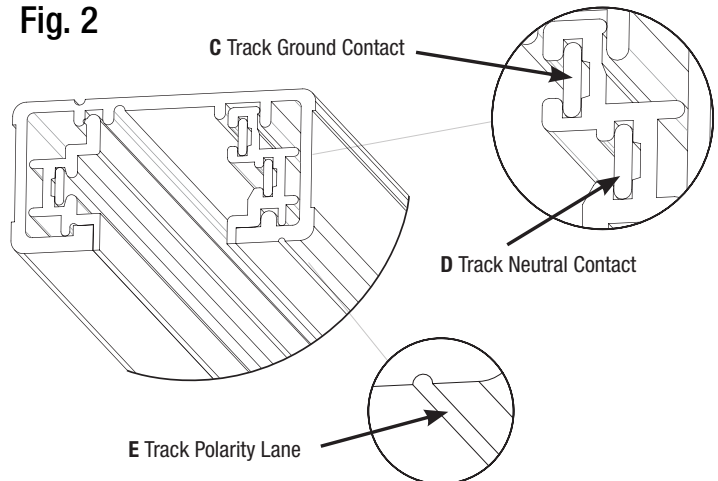


Fig. 3


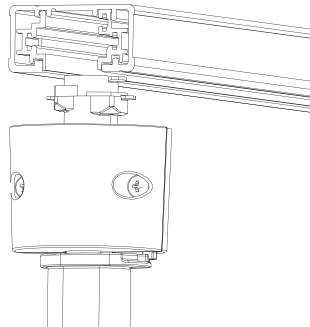


Fig. 4

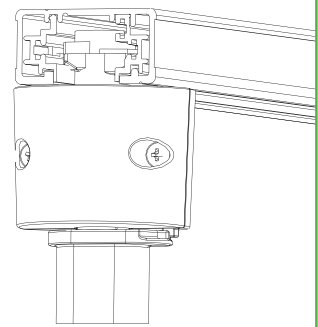

Budget Track Light

REMOVAL INSTRUCTIONS

REMOVING UNIT FROM TRACK

NOTE: Do not touch without letting light fixture cool.

STEP 1

Secure the LED track fixture body. On the adapter housing, pull the latch downward.

Twist adapter approximately 1/4 turn (90°) until the outer connector housing lock tabs are on the outside of the track opening.

STEP 2

Detach fixture from track.

AIMING THE LED FIXTURE

STEP 1

Once LED fixture is installed on the track, adjustments may be made to aim the fixture on the desired location.

The track head can be rotated 340° side to side and tilted 100° vertically (downward). (Fig. 5).

Fig. 5

